




Jazz Bass J2

Jazz Bass J2

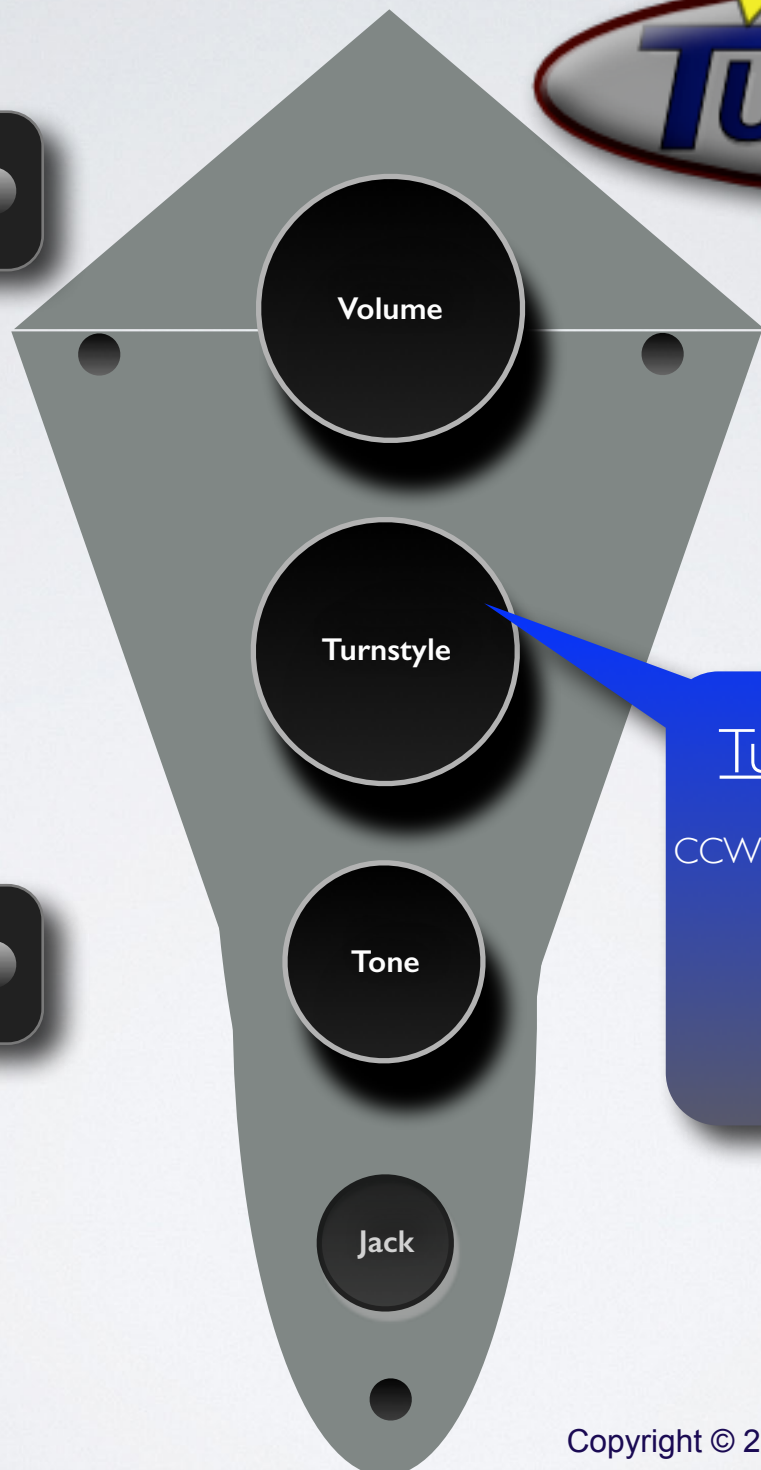

Turnstyle Switch

- CCW 1) Bridge
- 2) Bridge & Neck
- 3) Neck
- 4) P-Bass
- 5) Rickebacker
- 6) Growl Bass



Tools Needed:

- Wire-Cutters / Wire-Strippers
- Philips Screwdriver
- Soldering Iron
- Solder
- Ligher

Prep Work:

- Remove existing control plate
- Twist pickup wires to the wires listed to the right, then solder the twisted wires.
- Slide a piece of the supplied heat-shrink tubing down over each solder joint.
- Ensuring that the tubing completely covers any bare wire or solder, wave a lighter under the tubing to shrink the tubing securely over the solder joint. Be careful to not over head the tubing which will cause it to melt.
- Carefully install the new control plate

J2 for Precision Bass®

Installation

PRECISION

Wire Color Key:

Bridge Pickup

Positive (ORANGE)

Negative (BLUE)

Neck Pickup

Positive (YELLOW)

Negative (ORANGE)