


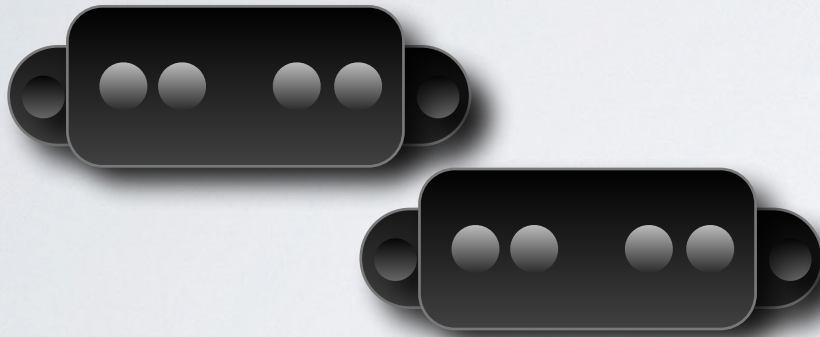


Precision Bass P I



Turnstyle Switch

- CCW 1) P-Bass
- 2) Jazz Bass
- 3) Rickenbacker
- 4) Scooped
- 5) Upright (Acoustic)
- 6) Growl (Fuzz Bass)

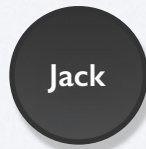



PI for Precision Bass®

Installation

DISCUSSION

Tools Needed:

- Wire-Cutters / Wire-Strippers
- Philips Screwdriver
- Soldering Iron
- Solder
- Lighter

Prep Work:

- Remove existing control plate
- Twist pickup wires to the wires listed to the right, then solder the twisted wires.
- Slide a piece of the supplied heat-shrink tubing down over each solder joint.
- Ensuring that the tubing completely covers any bare wire or solder, wave a lighter under the tubing to shrink the tubing securely over the solder joint. Be careful to not over heat the tubing which will cause it to melt.
- Carefully install the new control plate

Wire Color Key:

Bridge Pickup

Positive (ORANGE)

Negative (BLUE)

Neck Pickup

Positive (YELLOW)

Negative (ORANGE)