


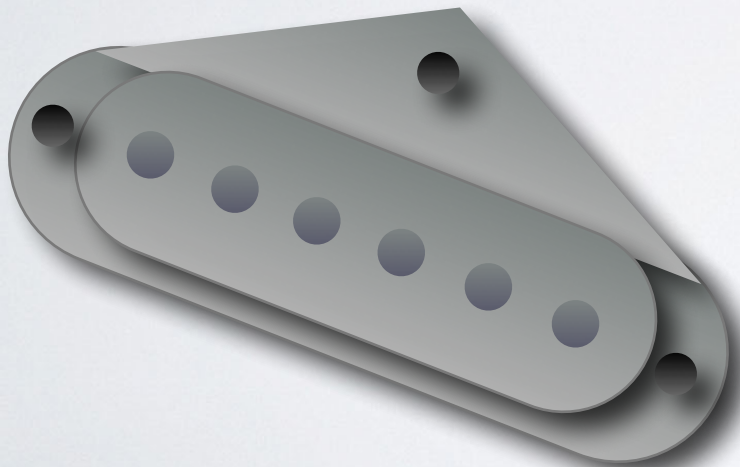

T2 for Telecaster
(2-Pickup)
(5-Pickup)



Turnstyle Switch

Normal

- 3) Neck
- 2) Bridge+Neck
- 1) Bridge

In

- 3) Parked Wah
- 2) Tele Thinline
- 1) Series (Humbucker)



T2 for Telecaster Installation

Tools Needed:

- Wire-Cutters / Wire-Strippers
- Philips Screwdriver
- Small Flat-Blade Screwdriver

Prep Work:

- Remove existing control plate (be sure to keep the two screws)
- Strip Pickup Wire Insulation Ends to expose 1/4" of bare wire
- If your neck pickup has the metal cover shorted to the negative pickup lead, remove the jumper wire and run a separate ground wire to the point indicated with an arrow in the picture to the right.

Installation:

- Connect Pickup Wires, Output Jack, Bridge Ground Wire, and Neck Pickup Shield Wire (if applicable) to Control Plate
- Install the new Turnstyle Switch Plate into the control cavity of the guitar
- Install the two original screws to hold down the control plate

Neck Pickup Cover Ground

